



**CSD-A510** HR(S,L), HA(S),  
HT(S,L)

# SERVICE MANUAL

---

COMPACT DISC RADIO  
CASSETTE RECORDER

---

BASIC TAPE MECHANISM : TN-21ZVC-2000  
BASIC CD MECHANISM : DA11T3C

---

- Replace this Service Manual with "Revision Publishing" when it is issued.

**aiwa**  
S/M Code No. 09-003-343-2T3

**SIMPLE**  
**DATA**

# ELECTRICAL MAIN PARTS LIST - 1

NOTE: The characters in the suffix column indicate the part usage.

HR(S) . . . . .	XX . . . . .	A . . . . .
HT(W) . . . . .	XX . . . . .	B . . . . .
HT(L) . . . . .	XX . . . . .	C . . . . .
HA(S) . . . . .	XX . . . . .	G . . . . .
HR(L) . . . . .	XX . . . . .	H . . . . .

REF. NO	PARTS NO.	NO.	DESCRIPTION	SUFFIX
L 601	87-003-102-080	0E	COIL, 10UH	ABCDEFGH . . . . .
C 605	87-010-264-040	0E	CAP, E 100-10 5L	ABCDEFGH . . . . .
C 614	87-010-312-080	0E	C-CAP, S 15P-50 CH	ABCDEFGH . . . . .
C 601	87-010-313-080	0E	CAP, CHIP 18P	ABCDEFGH . . . . .
C 602	87-010-315-080	0E	C-CAP, S 27P-50 CH	ABCDEFGH . . . . .
C 604	87-010-317-010	0E	CHIP CAP, S 39P CH	ABCDEFGH . . . . .
C 603	87-010-319-080	0E	C-CAP, S 56P-50 CH	ABCDEFGH . . . . .
C 609	87-010-400-080	0E	CAP, ELECT 0.47-50V	ABCDEFGH . . . . .
C 608	87-010-405-080	0E	CAP, ELECT 10-50V	ABCDEFGH . . . . .
C 606	87-012-368-080	0E	C-CAP, S 0.1-50 F	ABCDEFGH . . . . .
C 613	87-012-368-080	0E	C-CAP, S 0.1-50 F	ABCDEFGH . . . . .
C 607	87-015-779-010	0E	CHIP CAPACITOR, 0.01	ABCDEFGH . . . . .
D 601	87-020-465-080	0E	DIODE, 1SS133 (110MA)	ABCDEFGH . . . . .
D 602	87-020-465-080	0E	DIODE, 1SS133 (110MA)	ABCDEFGH . . . . .
D 607	87-020-465-080	0E	DIODE, 1SS133 (110MA)	ABCDEFGH . . . . .
D 608	87-020-465-080	0E	DIODE, 1SS133 (110MA)	ABCDEFGH . . . . .
Q 603	87-026-237-080	0E	CHIP-TR, DTC124XK	ABCDEFGH . . . . .
Q 610	87-026-463-080	0E	TR, 2SA933S (0.3W)	ABCDEFGH . . . . .
Q 606	87-026-464-010	0E	TR, DTC114TS	ABCDEFGH . . . . .
Q 607	87-026-464-010	0E	TR, DTC114TS	ABCDEFGH . . . . .
Q 608	87-026-464-010	0E	TR, DTC114TS	ABCDEFGH . . . . .
Q 609	87-026-464-010	0E	TR, DTC114TS	ABCDEFGH . . . . .
Q 613	87-026-464-010	0E	TR, DTC114TS	ABCDEFGH . . . . .
X 601	87-030-273-010	1A	VIB, XTAL 32.768K5PPM	ABCDEFGH . . . . .
X 602	87-030-376-080	1A	VIB, CER CSA5.76MG200	ABCDEFGH . . . . .
D 606	87-070-345-080	0E	DIODE, IN4148	ABCDEFGH . . . . .
CN 601	87-099-033-010	0E	16P 6216 H	ABCDEFGH . . . . .
CN 602	87-099-201-010	0E	CONN, 8P 6216 H	ABCDEFGH . . . . .
C 611	87-A10-189-040	0E	CAP, E 220-10	ABCDEFGH . . . . .
S 601	87-A90-696-080	0E	SW, TACT TS2103-03-430	ABCDEFGH . . . . .
S 602	87-A90-696-080	0E	SW, TACT TS2103-03-430	ABCDEFGH . . . . .
S 603	87-A90-696-080	0E	SW, TACT TS2103-03-430	ABCDEFGH . . . . .
S 604	87-A90-696-080	0E	SW, TACT TS2103-03-430	ABCDEFGH . . . . .
S 605	87-A90-696-080	0E	SW, TACT TS2103-03-430	ABCDEFGH . . . . .
S 609	87-A90-696-080	0E	SW, TACT TS2103-03-430	ABCDEFGH . . . . .
S 610	87-A90-696-080	0E	SW, TACT TS2103-03-430	ABCDEFGH . . . . .
S 611	87-A90-696-080	0E	SW, TACT TS2103-03-430	ABCDEFGH . . . . .
LED 611	87-CD8-616-010		LED, SA36-11 HWA-11.0	ABCDEFGH . . . . .
LED 601	88-CD6-630-010		LED, 934ID RED	ABCDEFGH . . . . .
LED 602	88-CD6-630-010		LED, 934ID RED	ABCDEFGH . . . . .
LED 603	88-CD6-630-010		LED, 934ID RED	ABCDEFGH . . . . .
LED 606	88-CD6-630-010		LED, 934ID RED	ABCDEFGH . . . . .
LED 607	88-CD6-630-010		LED, 934ID RED	ABCDEFGH . . . . .
LED 608	88-CD6-630-010		LED, 934ID RED	ABCDEFGH . . . . .
LED 610	88-CD6-631-010		LED, 934GD GRN	ABCDEFGH . . . . .
Q 604	89-317-403-080	0E	TR, 2SC1740S	ABCDEFGH . . . . .
IC 604	8A-CD9-610-010	1D	C-IC, LC865516A-***	ABCDEFGH . . . . .
CNA 604	8A-CD9-623-010		CONN ASSY, 4P KEY	ABCDEFGH . . . . .
CN 605	87-A60-114-010	0E	CONN, 4P H S2M-4WR	ABCDEFGH . . . . .
J 251	87-A60-569-010	1C	JACK, HTJ-035-18	ABCDEFGH . . . . .
CN 204	87-A60-685-010	0E	CONN, 4P H WHT EH	ABCDEFGH . . . . .
S 606	87-A90-696-080	0E	SW, TACT TS2103-03-430	ABCDEFGH . . . . .
S 607	87-A90-696-080	0E	SW, TACT TS2103-03-430	ABCDEFGH . . . . .
S 608	87-A90-696-080	0E	SW, TACT TS2103-03-430	ABCDEFGH . . . . .
S 614	87-A90-696-080	0E	SW, TACT TS2103-03-430	ABCDEFGH . . . . .
S 615	87-A90-696-080	0E	SW, TACT TS2103-03-430	ABCDEFGH . . . . .
CNA 203	8A-CD9-628-010		CONN ASSY, 3P MA-HP	ABCDEFGH . . . . .
C 901	87-010-192-080	0E	C-CAP, S 0.022-50 F	ABCDEFGH . . . . .
C 902	87-010-192-080	0E	C-CAP, S 0.022-50 F	ABCDEFGH . . . . .
C 903	87-010-192-080	0E	C-CAP, S 0.022-50 F	ABCDEFGH . . . . .
C 904	87-010-192-080	0E	C-CAP, S 0.022-50 F	ABCDEFGH . . . . .
D 901	87-A40-465-010	0E	DIODE, FR202	ABCDEFGH . . . . .
D 902	87-A40-465-010	0E	DIODE, FR202	ABCDEFGH . . . . .
D 903	87-A40-465-010	0E	DIODE, FR202	ABCDEFGH . . . . .
D 904	87-A40-465-010	0E	DIODE, FR202	ABCDEFGH . . . . .
PR 901	87-A90-092-080	1A	PROTECTOR, 2.5A 491	ABCDEFGH . . . . .
SP 901	87-CD6-213-010		SPR-C, BATT (-)	ABCDEFGH . . . . .
SP 902	87-CD6-213-010		SPR-C, BATT (-)	ABCDEFGH . . . . .
SP 903	87-CD6-213-010		SPR-C, BATT (-)	ABCDEFGH . . . . .
SP 904	87-CD6-213-010		SPR-C, BATT (-)	ABCDEFGH . . . . .
CNA 901	8A-CD9-627-010		CONN ASSY, 3P PWR	ABCDEFGH . . . . .
C 239	87-010-197-080	0E	CAP, CHIP 0.01 DM	ABCDEFGH . . . . .
C 240	87-010-197-080	0E	CAP, CHIP 0.01 DM	ABCDEFGH . . . . .
C 231	87-010-213-080	0E	C-CAP, S 0.015-50 B	ABCDEFGH . . . . .
C 232	87-010-213-080	0E	C-CAP, S 0.015-50 B	ABCDEFGH . . . . .
C 310	87-010-248-080	0E	CAP, ELECT 220-10V	ABCDEFGH . . . . .
C 247	87-010-401-080	0E	CAP, ELECT 1-50V	ABCDEFGH . . . . .
C 248	87-010-401-080	0E	CAP, ELECT 1-50V	ABCDEFGH . . . . .
C 237	87-010-408-080	0E	CAP, ELECT 47-50V	ABCDEFGH . . . . .
C 819	87-010-426-080	0E	C-CAP, S 0.012-25 B	ABCDEFGH . . . . .
C 820	87-010-426-080	0E	C-CAP, S 0.012-25 B	ABCDEFGH . . . . .
C 211	87-010-805-080	0E	CAP, S 1-16	ABCDEFGH . . . . .
C 212	87-010-805-080	0E	CAP, S 1-16	ABCDEFGH . . . . .

## ELECTRICAL MAIN PARTS LIST - 2

C	483	87-012-156-080	0E	C-CAP, S 220P-50	CH	ABCDEFGH.....
C	484	87-012-156-080	0E	C-CAP, S 220P-50	CH	ABCDEFGH.....
C	215	87-016-460-080	0E	C-CAP, S 0.22-16	B	ABCDEFGH.....
C	216	87-016-460-080	0E	C-CAP, S 0.22-16	B	ABCDEFGH.....
C	235	87-016-669-080	0E	C-CAP, S 0.1-25	K B	ABCDEFGH.....
C	236	87-016-669-080	0E	C-CAP, S 0.1-25	K B	ABCDEFGH.....
D	310	87-020-465-080	0E	DIODE, 1SS133 (110MA)		ABCDEFGH.....
C	233	87-A10-201-080	0E	C-CAP, S 0.33-16	KB	ABCDEFGH.....
C	234	87-A10-201-080	0E	C-CAP, S 0.33-16	KB	ABCDEFGH.....
IC	203	87-A21-520-040	1E	C-IC, M61509FP		ABCDEFGH.....
C	267	87-010-112-080	0E	CAP, ELECT 100-16V		ABCDEFGH.....
C	268	87-010-112-080	0E	CAP, ELECT 100-16V		ABCDEFGH.....
C	263	87-010-178-080	0E	CHIP CAP 1000P		ABCDEFGH.....
C	264	87-010-178-080	0E	CHIP CAP 1000P		ABCDEFGH.....
C	271	87-010-237-080	1A	CAP, ELECT 1000-16V		ABCDEFGH.....
C	272	87-010-237-080	1A	CAP, ELECT 1000-16V		ABCDEFGH.....
C	265	87-010-263-080	0E	CAP, ELECT 100-10V		ABCDEFGH.....
C	266	87-010-263-080	0E	CAP, ELECT 100-10V		ABCDEFGH.....
C	279	87-010-385-080	0E	CAP, ELECT 220-25V		ABCDEFGH.....
C	261	87-010-402-080	0E	CAP, ELECT 2.2-50V		ABCDEFGH.....
C	262	87-010-402-080	0E	CAP, ELECT 2.2-50V		ABCDEFGH.....
C	278	87-010-405-080	0E	CAP, ELECT 10-50V		ABCDEFGH.....
IC	202	87-A21-064-010	1D	IC, LA4227		ABCDEFGH.....
CN	202	8A-CH4-689-010	0E	CONN, 3P V 2.5		ABCDEFGH.....
C	308	87-010-221-080	0E	CAP, ELECT 470-10V		ABCDEFGH.....
C	311	87-010-374-080	0E	CAP, ELECT 47-10V		ABCDEFGH.....
C	312	87-010-385-080	0E	CAP, ELECT 220-25V		ABCDEFGH.....
C	307	87-010-401-080	0E	CAP, ELECT 1-50V		ABCDEFGH.....
C	306	87-010-404-080	0E	CAP, ELECT 4.7-50V		ABCDEFGH.....
C	325	87-010-405-080	0E	CAP, ELECT 10-50V		ABCDEFGH.....
C	301	87-016-495-000	1B	CAP, E 3300-25 M SMG		ABCDEFGH.....
Q	303	87-026-291-080	1A	TR, DTC124XS		ABCDEFGH.....
Q	305	87-026-462-080	0E	TR, 2SC1740 S(RS 0.3W)		ABCDEFGH.....
Q	302	87-026-463-080	0E	TR, 2SA933S (0.3W)		ABCDEFGH.....
D	311	87-027-702-080	0E	DIODE, ZENER HZ6C2L (200MA)		ABCDEFGH.....
D	303	87-070-345-080	0E	DIODE, IN4148		ABCDEFGH.....
D	305	87-070-345-080	0E	DIODE, IN4148		ABCDEFGH.....
D	306	87-070-345-080	0E	DIODE, IN4148		ABCDEFGH.....
D	304	87-A40-648-080	0E	ZENER, MTZJ8.2A		ABCDEFGH.....
Q	301	89-112-965-080	0E	TR, 2SA1296 (0.75W)		ABCDEFGH.....
Q	304	89-213-702-080	1A	TR, 2SB1370E		ABCDEFGH.....
Q	310	89-318-154-080	0E	TR, 2SC1815 (0.4W)		ABCDEFGH.....
CN	301	8A-CH4-689-010	0E	CONN, 3P V 2.5		ABCDEFGH.....
L	801	87-007-342-010	0E	COIL, OSC 85K BIAS		ABCDEFGH.....
C	811	87-010-178-080	0E	CHIP CAP 1000P		ABCDEFGH.....
C	812	87-010-178-080	0E	CHIP CAP 1000P		ABCDEFGH.....
C	823	87-010-178-080	0E	CHIP CAP 1000P		ABCDEFGH.....
C	824	87-010-178-080	0E	CHIP CAP 1000P		ABCDEFGH.....
C	829	87-010-178-080	0E	CHIP CAP 1000P		ABCDEFGH.....
C	830	87-010-178-080	0E	CHIP CAP 1000P		ABCDEFGH.....
C	845	87-010-178-080	0E	CHIP CAP 1000P		ABCDEFGH.....
C	852	87-010-178-080	0E	CHIP CAP 1000P		ABCDEFGH.....
C	816	87-010-180-080	0E	C-CER 1500P		ABCDEFGH.....
C	817	87-010-180-080	0E	C-CER 1500P		ABCDEFGH.....
C	851	87-010-186-080	0E	CAP, CHIP 4700P		ABCDEFGH.....
C	843	87-010-197-080	0E	CAP, CHIP 0.01 DM		ABCDEFGH.....
C	831	87-010-198-080	0E	CAP, CHIP 0.022		ABCDEFGH.....
C	801	87-010-248-080	0E	CAP, ELECT 220-10V		ABCDEFGH.....
C	834	87-010-248-080	0E	CAP, ELECT 220-10V		ABCDEFGH.....
C	30	87-010-260-080	0E	CAP, ELECT 47-25V		ABCDEFGH.....
C	846	87-010-263-080	0E	CAP, ELECT 100-10V		ABCDEFGH.....
C	835	87-010-322-080	0E	C-CAP, S 100P-50	CH	ABCDEFGH.....
C	836	87-010-322-080	0E	C-CAP, S 100P-50	CH	ABCDEFGH.....
C	821	87-010-401-080	0E	CAP, ELECT 1-50V		ABCDEFGH.....
C	822	87-010-401-080	0E	CAP, ELECT 1-50V		ABCDEFGH.....
C	807	87-010-405-080	0E	CAP, ELECT 10-50V		ABCDEFGH.....
C	808	87-010-405-080	0E	CAP, ELECT 10-50V		ABCDEFGH.....
C	809	87-010-405-080	0E	CAP, ELECT 10-50V		ABCDEFGH.....
C	810	87-010-405-080	0E	CAP, ELECT 10-50V		ABCDEFGH.....
C	805	87-012-365-080	0E	C-CAP, S 0.027-25VBK		ABCDEFGH.....
C	806	87-012-365-080	0E	C-CAP, S 0.027-25VBK		ABCDEFGH.....
D	308	87-017-978-080	0E	DIODE, 1N4003		ABCDEFGH.....
C	844	87-018-124-080	0E	CAP, CER 270P-50V		ABCDEFGH.....
C	833	87-018-195-080	0E	CAP, CER 1200P-16V		ABCDEFGH.....
C	853	87-018-211-080	0E	CAP, CER 0.01-50		ABC...GH.....
D	809	87-020-465-080	0E	DIODE, 1SS133 (110MA)		ABCDEFGH.....
D	810	87-020-465-080	0E	DIODE, 1SS133 (110MA)		ABCDEFGH.....
Q	810	87-026-464-080	0E	TR, DTC114TS (0.3W)		ABCDEFGH.....
R	840	87-029-124-010	0E	RES, FUSE 2.2-1/4		ABCDEFGH.....
D	309	87-070-345-080	0E	DIODE, IN4148		ABCDEFGH.....
D	807	87-070-345-080	0E	DIODE, IN4148		ABCDEFGH.....
D	808	87-070-345-080	0E	DIODE, IN4148		ABCDEFGH.....
C	853	87-A11-145-080	0E	CAP, TC U 0.01-50 Z F		... DEF .....
IC	801	87-A21-431-010	0E	IC, BA4560N		ABCDEFGH.....
CN	801	87-A60-110-010	0E	CONN, 4P V S2M-4W		ABCDEFGH.....
Q	801	89-318-154-080	0E	TR, 2SC1815 (0.4W)		ABCDEFGH.....
CN	802	8A-CH4-687-010	0E	CONN, 4P V 2.5		ABCDEFGH.....
SW	801	8Z-CD9-609-010	SW	SL 1-6-2 PS62D01		ABCDEFGH.....
C	321	87-010-197-080	0E	CAP, CHIP 0.01 DM		ABCDEFGH.....
C	322	87-010-263-080	0E	CAP, ELECT 100-10V		ABCDEFGH.....
Q	841	87-026-291-080	1A	TR, DTC124XS		ABCDEFGH.....
D	32	87-027-399-080	0E	ZENER, HZ7A3L (200MA)		... DEF .....
D	32	87-027-607-080	0E	ZENER, HZ7B3L		ABC...GH.....


# ELECTRICAL MAIN PARTS LIST - 3

D	323	87-070-345-080	0E	DIODE, IN4148	ABC . . . GH . . .
CN	201	87-099-018-010	0E	CONN, 16P	ABCDEF GH . . .
Q	321	89-318-154-080	0E	TR, 2SC1815 (0.4W)	ABCDEF GH . . .
CN	302	8A-CD9-629-010		CONN ASSY, 6P MA-TU	ABCDEF GH . . .
L	401	87-003-102-080	0E	COIL, 10UH	ABCDEF GH . . .
L	404	87-003-152-080	0E	COIL, 100UH	ABCDEF GH . . .
C	425	87-010-176-080	0E	C-CAP, S 680P-50 SL	ABCDEF GH . . .
C	407	87-010-178-080	0E	CHIP CAP 1000P	ABCDEF GH . . .
C	439	87-010-178-080	0E	CHIP CAP 1000P	ABCDEF GH . . .
C	422	87-010-183-080	0E	C-CAP, S 2700P-50 B	ABCDEF GH . . .
C	434	87-010-184-080	0E	CHIP CAPACITOR 3300P(K)	ABCDEF GH . . .
C	429	87-010-186-080	0E	CAP, CHIP 4700P	ABCDEF GH . . .
C	494	87-010-197-080	0E	CAP, CHIP 0.01 DM	ABCDEF GH . . .
C	408	87-010-198-080	0E	CAP, CHIP 0.022	ABCDEF GH . . .
C	418	87-010-213-080	0E	C-CAP, S 0.015-50 B	ABCDEF GH . . .
C	480	87-010-221-080	0E	CAP, ELECT 470-10V	ABCDEF GH . . .
C	476	87-010-236-080	0E	CAP, E 1000-10 SME	ABCDEF GH . . .
C	455	87-010-247-080	0E	CAP, ELECT 100-50V	ABCDEF GH . . .
C	404	87-010-248-080	0E	CAP, ELECT 220-10V	ABCDEF GH . . .
C	409	87-010-248-080	0E	CAP, ELECT 220-10V	ABCDEF GH . . .
C	462	87-010-248-080	0E	CAP, ELECT 220-10V	ABCDEF GH . . .
C	403	87-010-263-080	0E	CAP, ELECT 100-10V	ABCDEF GH . . .
C	410	87-010-263-080	0E	CAP, ELECT 100-10V	ABCDEF GH . . .
C	459	87-010-263-080	0E	CAP, ELECT 100-10V	ABCDEF GH . . .
C	467	87-010-263-080	0E	CAP, ELECT 100-10V	ABCDEF GH . . .
C	478	87-010-263-080	0E	CAP, ELECT 100-10V	ABCDEF GH . . .
C	442	87-010-312-080	0E	C-CAP, S 15P-50 CH	ABCDEF GH . . .
C	457	87-010-312-080	0E	C-CAP, S 15P-50 CH	ABCDEF GH . . .
C	458	87-010-312-080	0E	C-CAP, S 15P-50 CH	ABCDEF GH . . .
C	448	87-010-315-080	0E	C-CAP, S 27P-50 CH	ABCDEF GH . . .
C	502	87-010-322-080	0E	C-CAP, S 100P-50 CH	ABCDEF GH . . .
C	503	87-010-322-080	0E	C-CAP, S 100P-50 CH	ABCDEF GH . . .
C	504	87-010-322-080	0E	C-CAP, S 100P-50 CH	ABCDEF GH . . .
C	505	87-010-322-080	0E	C-CAP, S 100P-50 CH	ABCDEF GH . . .
C	506	87-010-322-080	0E	C-CAP, S 100P-50 CH	ABCDEF GH . . .
C	406	87-010-374-080	0E	CAP, ELECT 47-10V	ABCDEF GH . . .
C	432	87-010-374-080	0E	CAP, ELECT 47-10V	ABCDEF GH . . .
C	436	87-010-374-080	0E	CAP, ELECT 47-10V	ABCDEF GH . . .
C	412	87-010-401-080	0E	CAP, ELECT 1-50V	ABCDEF GH . . .
C	433	87-010-401-080	0E	CAP, ELECT 1-50V	ABCDEF GH . . .
C	401	87-010-403-080	0E	CAP, ELECT 3.3-50V	ABCDEF GH . . .
C	437	87-010-404-080	0E	CAP, ELECT 4.7-50V	ABCDEF GH . . .
C	465	87-010-404-080	0E	CAP, ELECT 4.7-50V	ABCDEF GH . . .
C	414	87-010-405-080	0E	CAP, ELECT 10-50V	ABCDEF GH . . .
C	481	87-010-405-080	0E	CAP, ELECT 10-50V	ABCDEF GH . . .
C	482	87-010-405-080	0E	CAP, ELECT 10-50V	ABCDEF GH . . .
C	470	87-010-544-080	0E	CAP, ELECT 0.1-50V	ABCDEF GH . . .
C	416	87-010-545-080	0E	CAP, ELECT 0.22-50V	ABCDEF GH . . .
C	431	87-010-545-080	0E	CAP, ELECT 0.22-50V	ABCDEF GH . . .
C	423	87-010-956-080	0E	CHIP-CAP, S 0.068-25B	ABCDEF GH . . .
C	424	87-010-993-080	0E	C-CAP, S 0.056-25 B	ABCDEF GH . . .
C	450	87-012-140-080	0E	CAP 470P	ABCDEF GH . . .
C	469	87-012-154-080	0E	C-CAP, S 150P-50 CH	ABCDEF GH . . .
C	430	87-012-156-080	0E	C-CAP, S 220P-50 CH	ABCDEF GH . . .
C	451	87-012-156-080	0E	C-CAP, S 220P-50 CH	ABCDEF GH . . .
C	417	87-012-157-080	0E	C-CAP, S 330P-50 CH	ABCDEF GH . . .
C	445	87-012-368-080	0E	C-CAP, S 0.1-50 F	ABCDEF GH . . .
C	446	87-012-368-080	0E	C-CAP, S 0.1-50 F	ABCDEF GH . . .
C	447	87-012-368-080	0E	C-CAP, S 0.1-50 F	ABCDEF GH . . .
C	466	87-012-368-080	0E	C-CAP, S 0.1-50 F	ABCDEF GH . . .
C	489	87-012-368-080	0E	C-CAP, S 0.1-50 F	ABCDEF GH . . .
C	490	87-012-368-080	0E	C-CAP, S 0.1-50 F	ABCDEF GH . . .
C	501	87-012-368-080	0E	C-CAP, S 0.1-50 F	ABCDEF GH . . .
C	471	87-015-785-080	0E	CHIP CAPACITOR, 0.1FZ-25Z	ABCDEF GH . . .
C	472	87-015-785-080	0E	CHIP CAPACITOR, 0.1FZ-25Z	ABCDEF GH . . .
C	473	87-015-785-080	0E	CHIP CAPACITOR, 0.1FZ-25Z	ABCDEF GH . . .
C	474	87-015-785-080	0E	CHIP CAPACITOR, 0.1FZ-25Z	ABCDEF GH . . .
C	460	87-015-819-080	0E	CAPACITOR, 0.01	ABCDEF GH . . .
C	413	87-016-369-080	0E	C-CAP, S 0.033-25 B K	ABCDEF GH . . .
C	420	87-016-369-080	0E	C-CAP, S 0.033-25 B K	ABCDEF GH . . .
C	438	87-016-669-080	0E	C-CAP, S 0.1-25 K B	ABCDEF GH . . .
C	495	87-016-669-080	0E	C-CAP, S 0.1-25 K B	ABCDEF GH . . .
C	510	87-016-669-080	0E	C-CAP, S 0.1-25 K B	ABCDEF GH . . .
Q	403	87-026-295-080	0E	TR, DTC144TK	ABCDEF GH . . .
Q	404	87-026-295-080	0E	TR, DTC144TK	ABCDEF GH . . .
Q	405	87-026-295-080	0E	TR, DTC144TK	ABCDEF GH . . .
D	401	87-070-345-080	0E	DIODE, IN4148	ABCDEF GH . . .
D	402	87-070-345-080	0E	DIODE, IN4148	ABCDEF GH . . .
D	403	87-070-345-080	0E	DIODE, IN4148	ABCDEF GH . . .
CN	403	87-099-201-010	0E	CONN, 8P 6216 H	ABCDEF GH . . .
C	411	87-A11-177-080	0E	C-CAP, S 0.15-16 K B	ABCDEF GH . . .
C	421	87-A11-177-080	0E	C-CAP, S 0.15-16 K B	ABCDEF GH . . .
C	419	87-A11-608-080	0E	C-CAP, S 0.33-25 K B	ABCDEF GH . . .
C	426	87-A11-608-080	0E	C-CAP, S 0.33-25 K B	ABCDEF GH . . .
IC	401	87-A20-446-010	1E	C-IC, LA9241ML	ABCDEF GH . . .
IC	402	87-A20-459-010	2A	C-IC, LC78622ED	ABCDEF GH . . .
IC	404	87-A21-093-010	1C	IC, LA6541D	ABCDEF GH . . .
CN	205	87-A60-109-010	0E	CONN, 2P V S2M-2W	ABCDEF GH . . .
CN	401	87-A60-424-010	0E	CONN, 16P V TOC-B	ABCDEF GH . . .
Q	401	89-109-332-380	0E	TR, 2SA933RS	ABCDEF GH . . .
Q	402	89-113-187-080	0E	TR, 2SA1318TU	ABCDEF GH . . .
CNA	402	8A-CD9-625-010		CONN ASSY, 6P CD-ME	ABCDEF GH . . .
X	401	8Z-CD5-633-010		VIB, CER16.93MHZ FCR16.93M2	ABCDEF GH . . .


## ELECTRICAL MAIN PARTS LIST - 4

C	491	87-010-197-080	0E CAP, CHIP 0.01 DM	ABCDEFGH.....
C	492	87-010-221-080	0E CAP, ELECT 470-10V	ABCDEFGH.....
Q	492	87-026-291-080	1A TR, DTC124XS	ABCDEFGH.....
D	491	87-070-345-080	0E DIODE, IN4148	ABCDEFGH.....
D	494	87-070-345-080	0E DIODE, IN4148	ABCDEFGH.....
Q	491	89-112-965-080	0E TR, 2SA1296 (0.75W)	ABCDEFGH.....
CF	2	82-785-747-010	1A CF MS2 GHY R	... DEF .....
CF	3	82-785-747-010	1A CF MS2 GHY R	... DEF .....
L	10	87-005-849-080	0E COIL, 10UH(CECS)	ABCDEFGH.....
CF	2	87-008-261-010	1A FILTER, SFE10.7MA5-A	ABC .. GH .....
CF	3	87-008-261-010	1A FILTER, SFE10.7MA5-A	ABC .. GH .....
C	4	87-010-148-080	0E CAP, CHIP S 75P SL	ABCDEF GH .....
C	42	87-010-150-080	0E C-CAP, S 6P-50 CH	... DEF .....
C	9	87-010-151-080	0E C-CAP, S 7P-50 CH	ABCDEF GH .....
C	56	87-010-152-080	0E C-CAP, S 8P-50 CH	ABCDEF GH .....
C	16	87-010-178-080	0E CHIP CAP 1000P	ABCDEF GH .....
C	24	87-010-188-080	0E CAP, CHIP 6800P	ABCDEF GH .....
C	25	87-010-188-080	0E CAP, CHIP 6800P	ABCDEF GH .....
C	8	87-010-197-080	0E CAP, CHIP 0.01 DM	ABCDEF GH .....
C	10	87-010-197-080	0E CAP, CHIP 0.01 DM	ABCDEF GH .....
C	22	87-010-197-080	0E CAP, CHIP 0.01 DM	ABCDEF GH .....
C	32	87-010-197-080	0E CAP, CHIP 0.01 DM	ABCDEF GH .....
C	33	87-010-197-080	0E CAP, CHIP 0.01 DM	ABCDEF GH .....
C	34	87-010-197-080	0E CAP, CHIP 0.01 DM	ABCDEF GH .....
C	35	87-010-197-080	0E CAP, CHIP 0.01 DM	ABCDEF GH .....
C	37	87-010-197-080	0E CAP, CHIP 0.01 DM	ABCDEF GH .....
C	38	87-010-197-080	0E CAP, CHIP 0.01 DM	ABCDEF GH .....
C	51	87-010-197-080	0E CAP, CHIP 0.01 DM	ABCDEF GH .....
C	18	87-010-198-080	0E CAP, CHIP 0.022	ABCDEF GH .....
C	30	87-010-248-080	0E CAP, ELECT 220-10V	ABCDEF GH .....
C	36	87-010-263-080	0E CAP, ELECT 100-10V	ABCDEF GH .....
C	9	87-010-311-080	0E CAP 12P	ABC .. GH .....
C	1	87-010-314-080	0E C-CAP, S 22P-50V	ABCDEF GH .....
C	3	87-010-314-080	0E C-CAP, S 22P-50V	ABCDEF GH .....
C	12	87-010-314-080	0E C-CAP, S 22P-50V	ABCDEF GH .....
C	2	87-010-316-080	0E C-CAP, S 33P-50 CH	ABC .. GH .....
C	2	87-010-318-080	0E C-CAP, S 47P-50 CH	... DEF .....
C	41	87-010-321-080	0E CHIP CAPACITOR, 82P(J)	ABC .. GH .....
C	13	87-010-322-080	0E C-CAP, S 100P-50 CH	ABCDEF GH .....
C	5	87-010-378-080	0E CAP, ELECT 10-16V	ABCDEF GH .....
C	31	87-010-379-080	0E CAP, ELECT 22-16V	ABCDEF GH .....
C	20	87-010-400-080	0E CAP, ELECT 0.47-50V	ABCDEF GH .....
C	21	87-010-403-080	0E CAP, ELECT 3.3-50V	ABCDEF GH .....
C	28	87-010-992-080	0E C-CAP, S 0.047-25 B	ABCDEF GH .....
C	29	87-010-992-080	0E C-CAP, S 0.047-25 B	ABCDEF GH .....
TC	5	87-011-253-080	0E TRIMMER, 30P LAR	.....
TC	6	87-011-253-080	0E TRIMMER, 30P LAR	.....
C	44	87-012-140-080	0E CAP 470P	.....
C	7	87-012-154-080	0E C-CAP, S 150P-50 CH	... DEF .....
C	7	87-012-156-080	0E C-CAP, S 220P-50 CH	ABCDEF GH .....
C	26	87-012-358-080	0E C-CAP, S 0.47-10 F Z	ABCDEF GH .....
C	27	87-012-358-080	0E C-CAP, S 0.47-10 F Z	ABCDEF GH .....
C	15	87-016-669-080	0E C-CAP, S 0.1-25 K B	ABCDEF GH .....
C	17	87-016-669-080	0E C-CAP, S 0.1-25 K B	ABCDEF GH .....
C	19	87-016-669-080	0E C-CAP, S 0.1-25 K B	ABCDEF GH .....
D	1	87-020-465-080	0E DIODE, 1SS133 (110MA)	ABCDEF GH .....
D	2	87-020-465-080	0E DIODE, 1SS133 (110MA)	ABCDEF GH .....
Q	4	87-026-213-080	0E CHIP-TR, DTC114YK	ABCDEF GH .....
Q	2	87-026-447-080	0E TR, 2SC1740S R	ABCDEF GH .....
Q	3	87-026-463-080	0E TR, 2SA933S (0.3W)	ABCDEF GH .....
IC	1	87-A20-955-010	1C IC, LA1828	ABCDEF GH .....
D	13	87-A40-128-080	0E C-VARI-CAP, HVU202A	ABCDEF GH .....
L	8	87-A50-335-010	1A COIL, FM IFT (TOKO)	ABCDEF GH .....
L	17	87-A50-337-010	1A COIL, AM OSC (TOKO)	ABCDEF GH .....
L	2	87-A50-560-010	0E COIL, FM BPF(ACD)	ABCDEF GH .....
L	4	87-A50-561-010	COIL, FM RF D(ACD)	... DEF .....
L	4	87-A50-562-010	0E COIL, FM RF EX(ACD)	ABC .. GH .....
L	5	87-A50-563-010	COIL, FM OSC D(ACD)	... DEF .....
L	5	87-A50-564-010	COIL, FM OSC EX(ACD)	ABC .. GH .....
L	16	87-A50-569-010	COIL, LW OSC-ACD(COI)	.....
L	9	87-A50-577-010	1A COIL, FM DET(ACD)	ABCDEF GH .....
L	7	87-A50-579-010	0E COIL, AM IFT(ACD)	ABCDEF GH .....
CN	2	87-A60-116-010	CONN, 6P H S2M-6WR	ABCDEF GH .....
CF	1	87-A90-128-010	0E FLTR, AM IF CFAL-455	ABCDEF GH .....
VC	1	87-A91-167-010	TUN-CAP, 20P-160P FA-22125 N000	... DEF .....
VC	1	87-A91-169-010	1D TUN-CAP, 40P-140P FA-22124 AN00	ABCDEF GH .....
S	1	87-A91-548-010	0E SW, SL-2-3 SK23E01G06	.....
S	1	87-A91-549-010	1A SW, SL-6-4 SK64D01G06	ABCDEF GH .....
VC	1	87-A91-635-010	1D TUN-CAP, 20P-140P E-ACD(MITSUMI)	ABC .. GH .....
Q	1	89-327-143-080	0E TR, 2SC2714 (0.1W)	ABCDEF GH .....
L	3	8A-CD9-660-010	1B BAR-ANT, MW 2B-ACD(COI)	ABCDEF GH .....
L	3	8A-CD9-661-010	BAR-ANT, MW/LW 3B-ACD(COI)	.....

## SCHEMATIC DIAGRAM-1

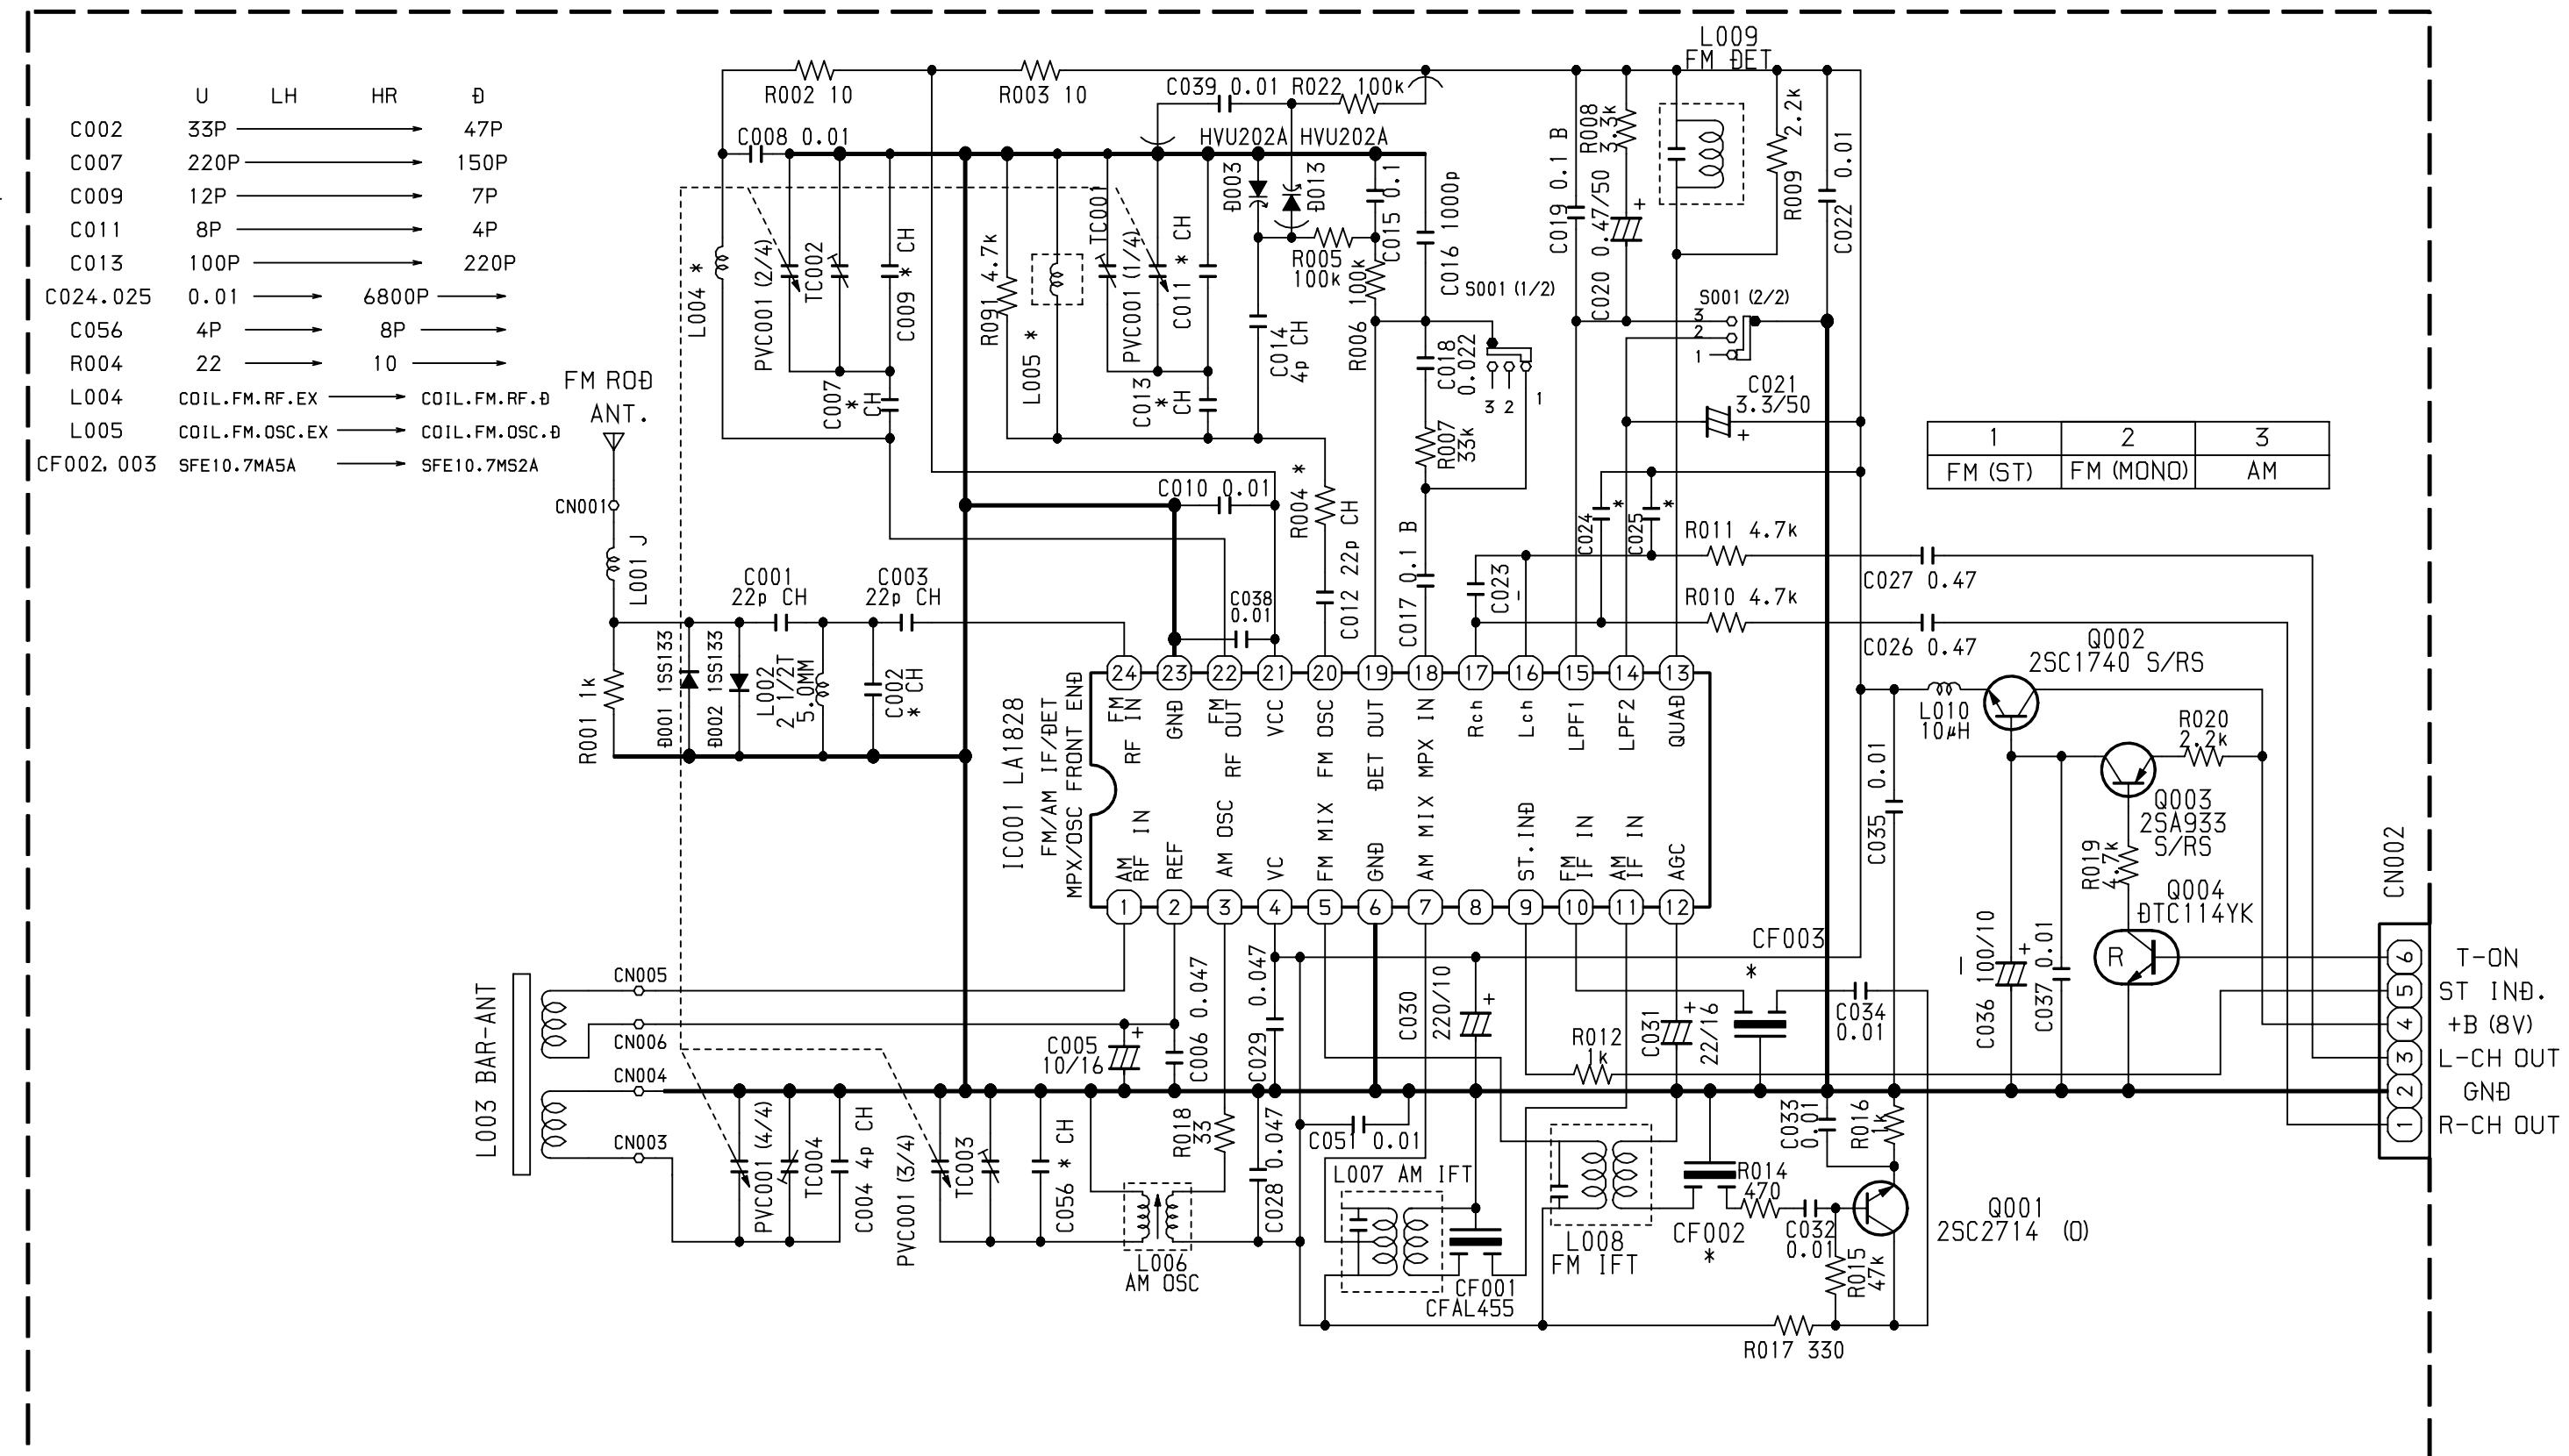


## SCHEMATIC DIAGRAM-2

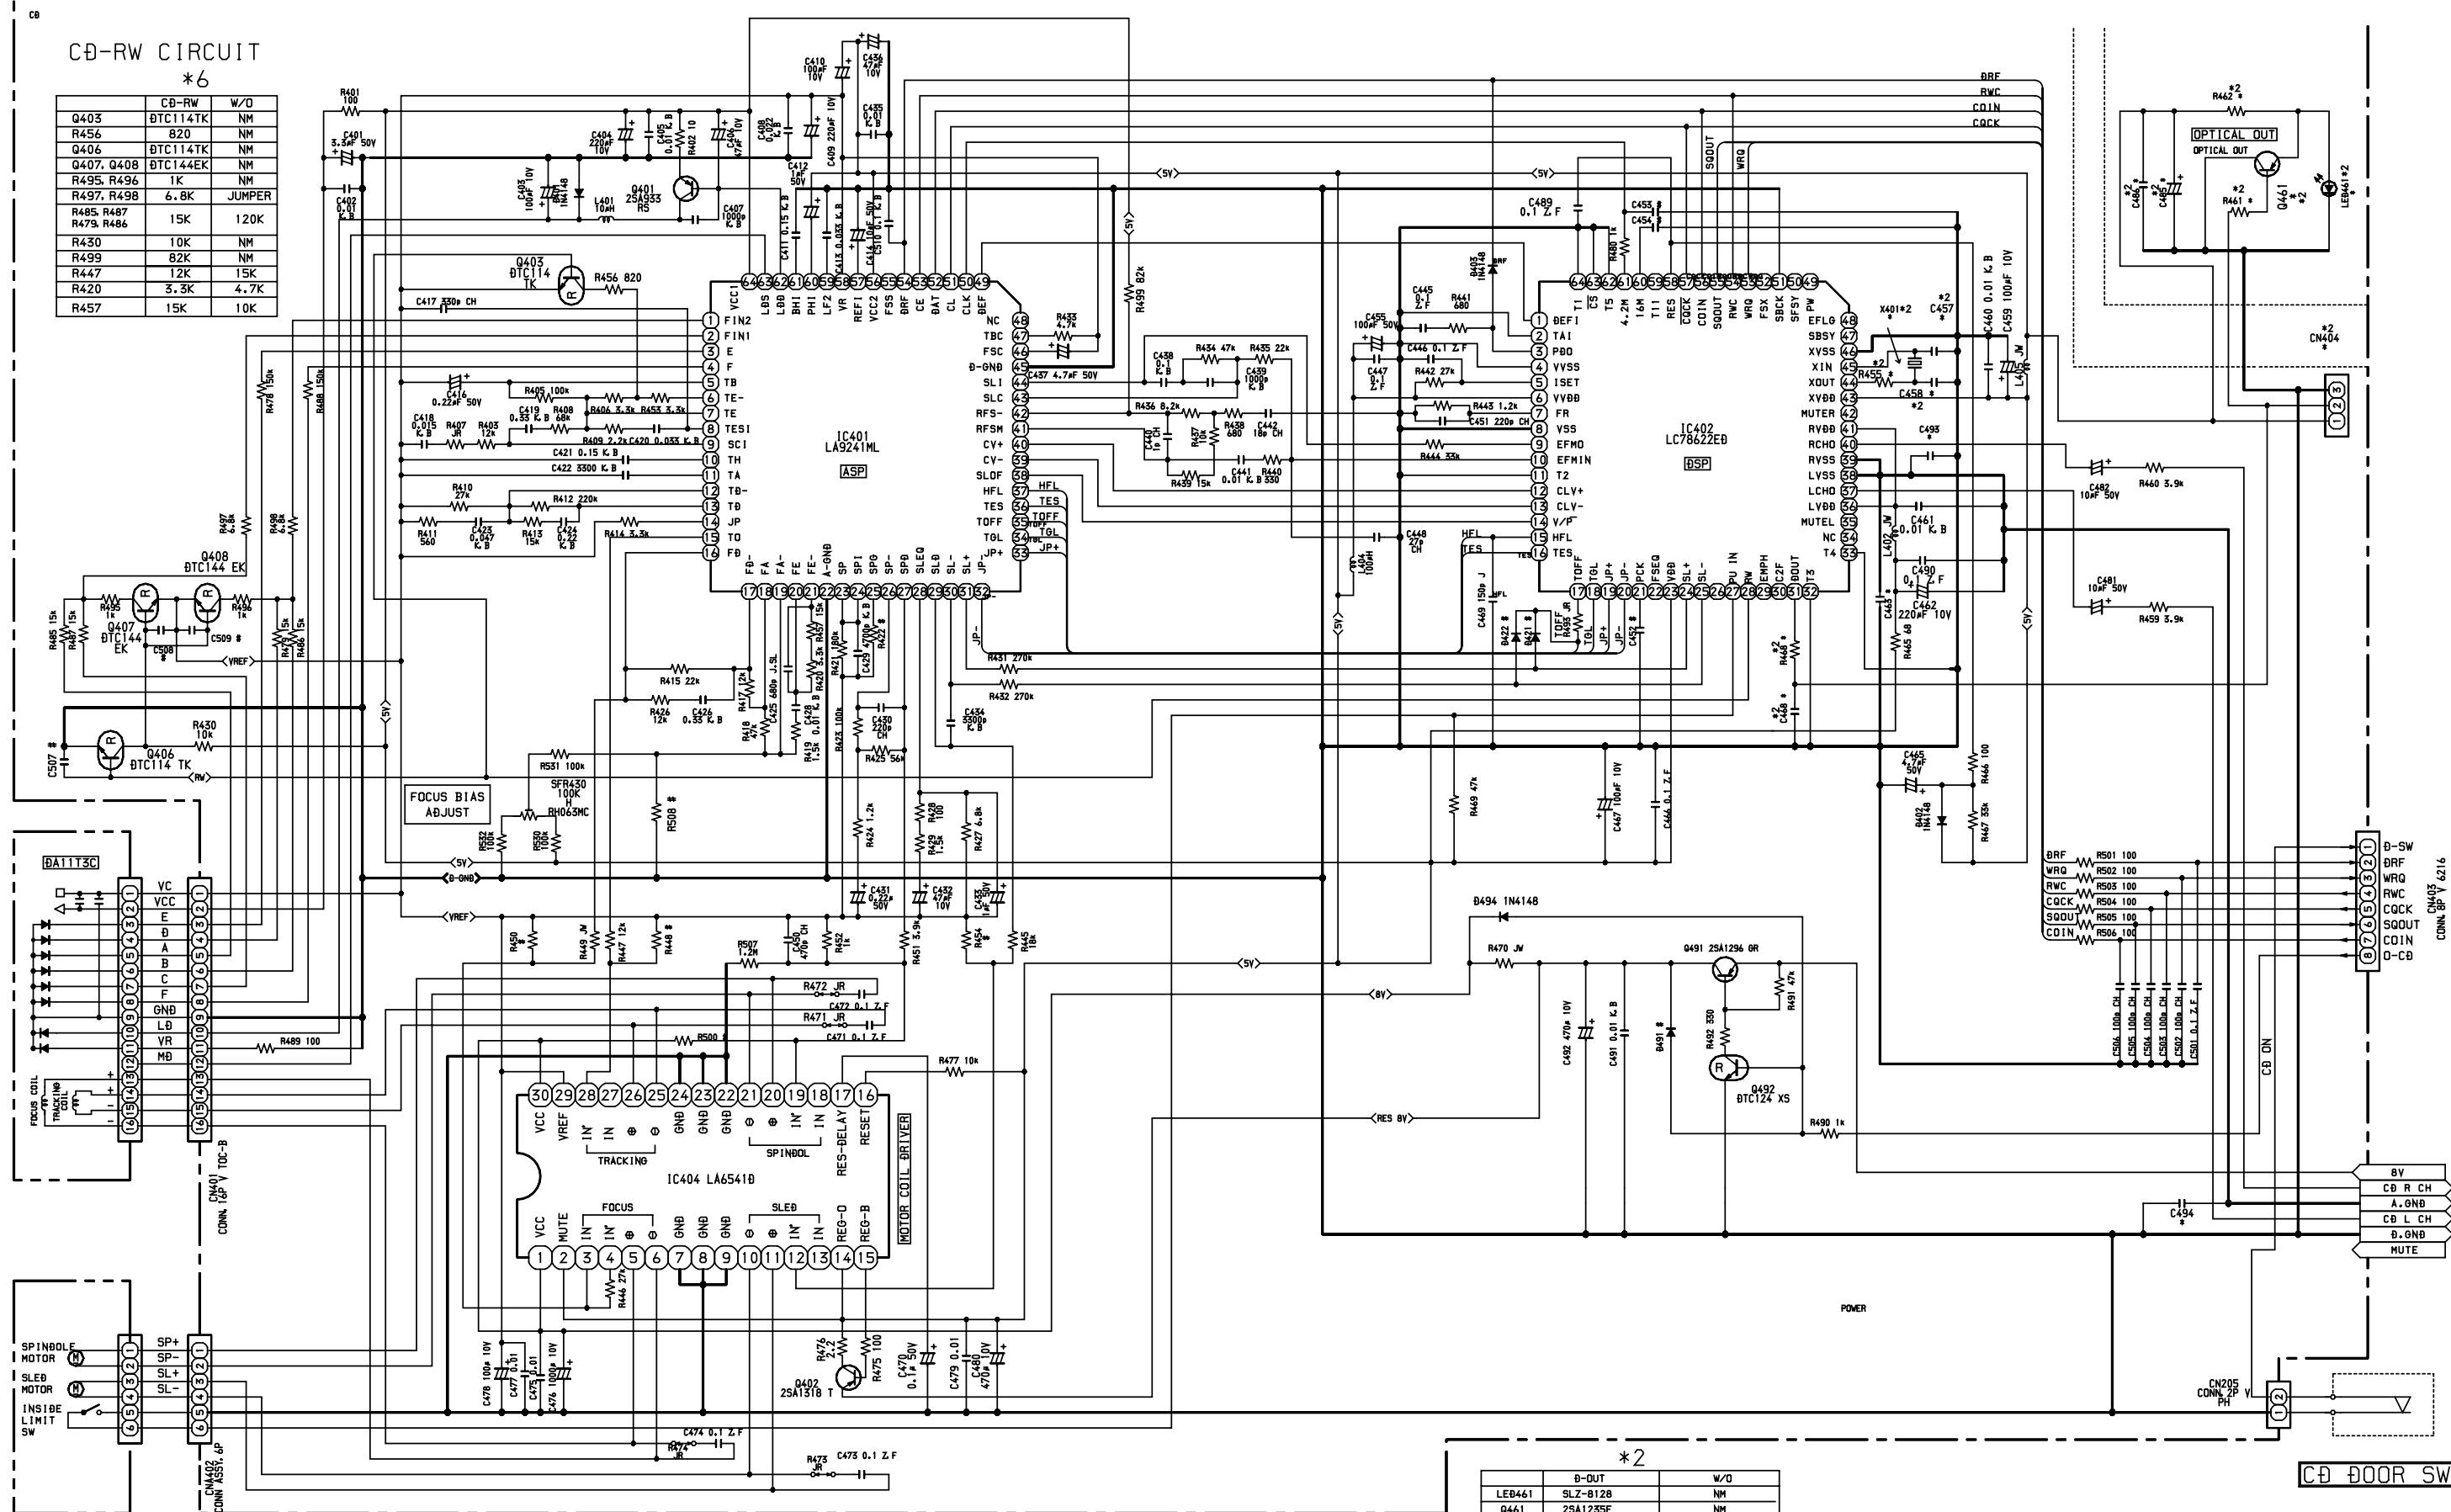


	B-DUT	W/D
LEB461	SLZ-8128	NM
Q461	25A1235F	NM
R461	220	NM
R462	390	NM
C485	100/10	NM
C486	0.01	NM
C488	100P	NM
R468	100	NM
R455	1K	100
C457, C458	35P	15P
X401	VIB. X TAL16.93MHZ	VIB. CER16.93MHZ


SCHEMATIC DIAGRAM-3

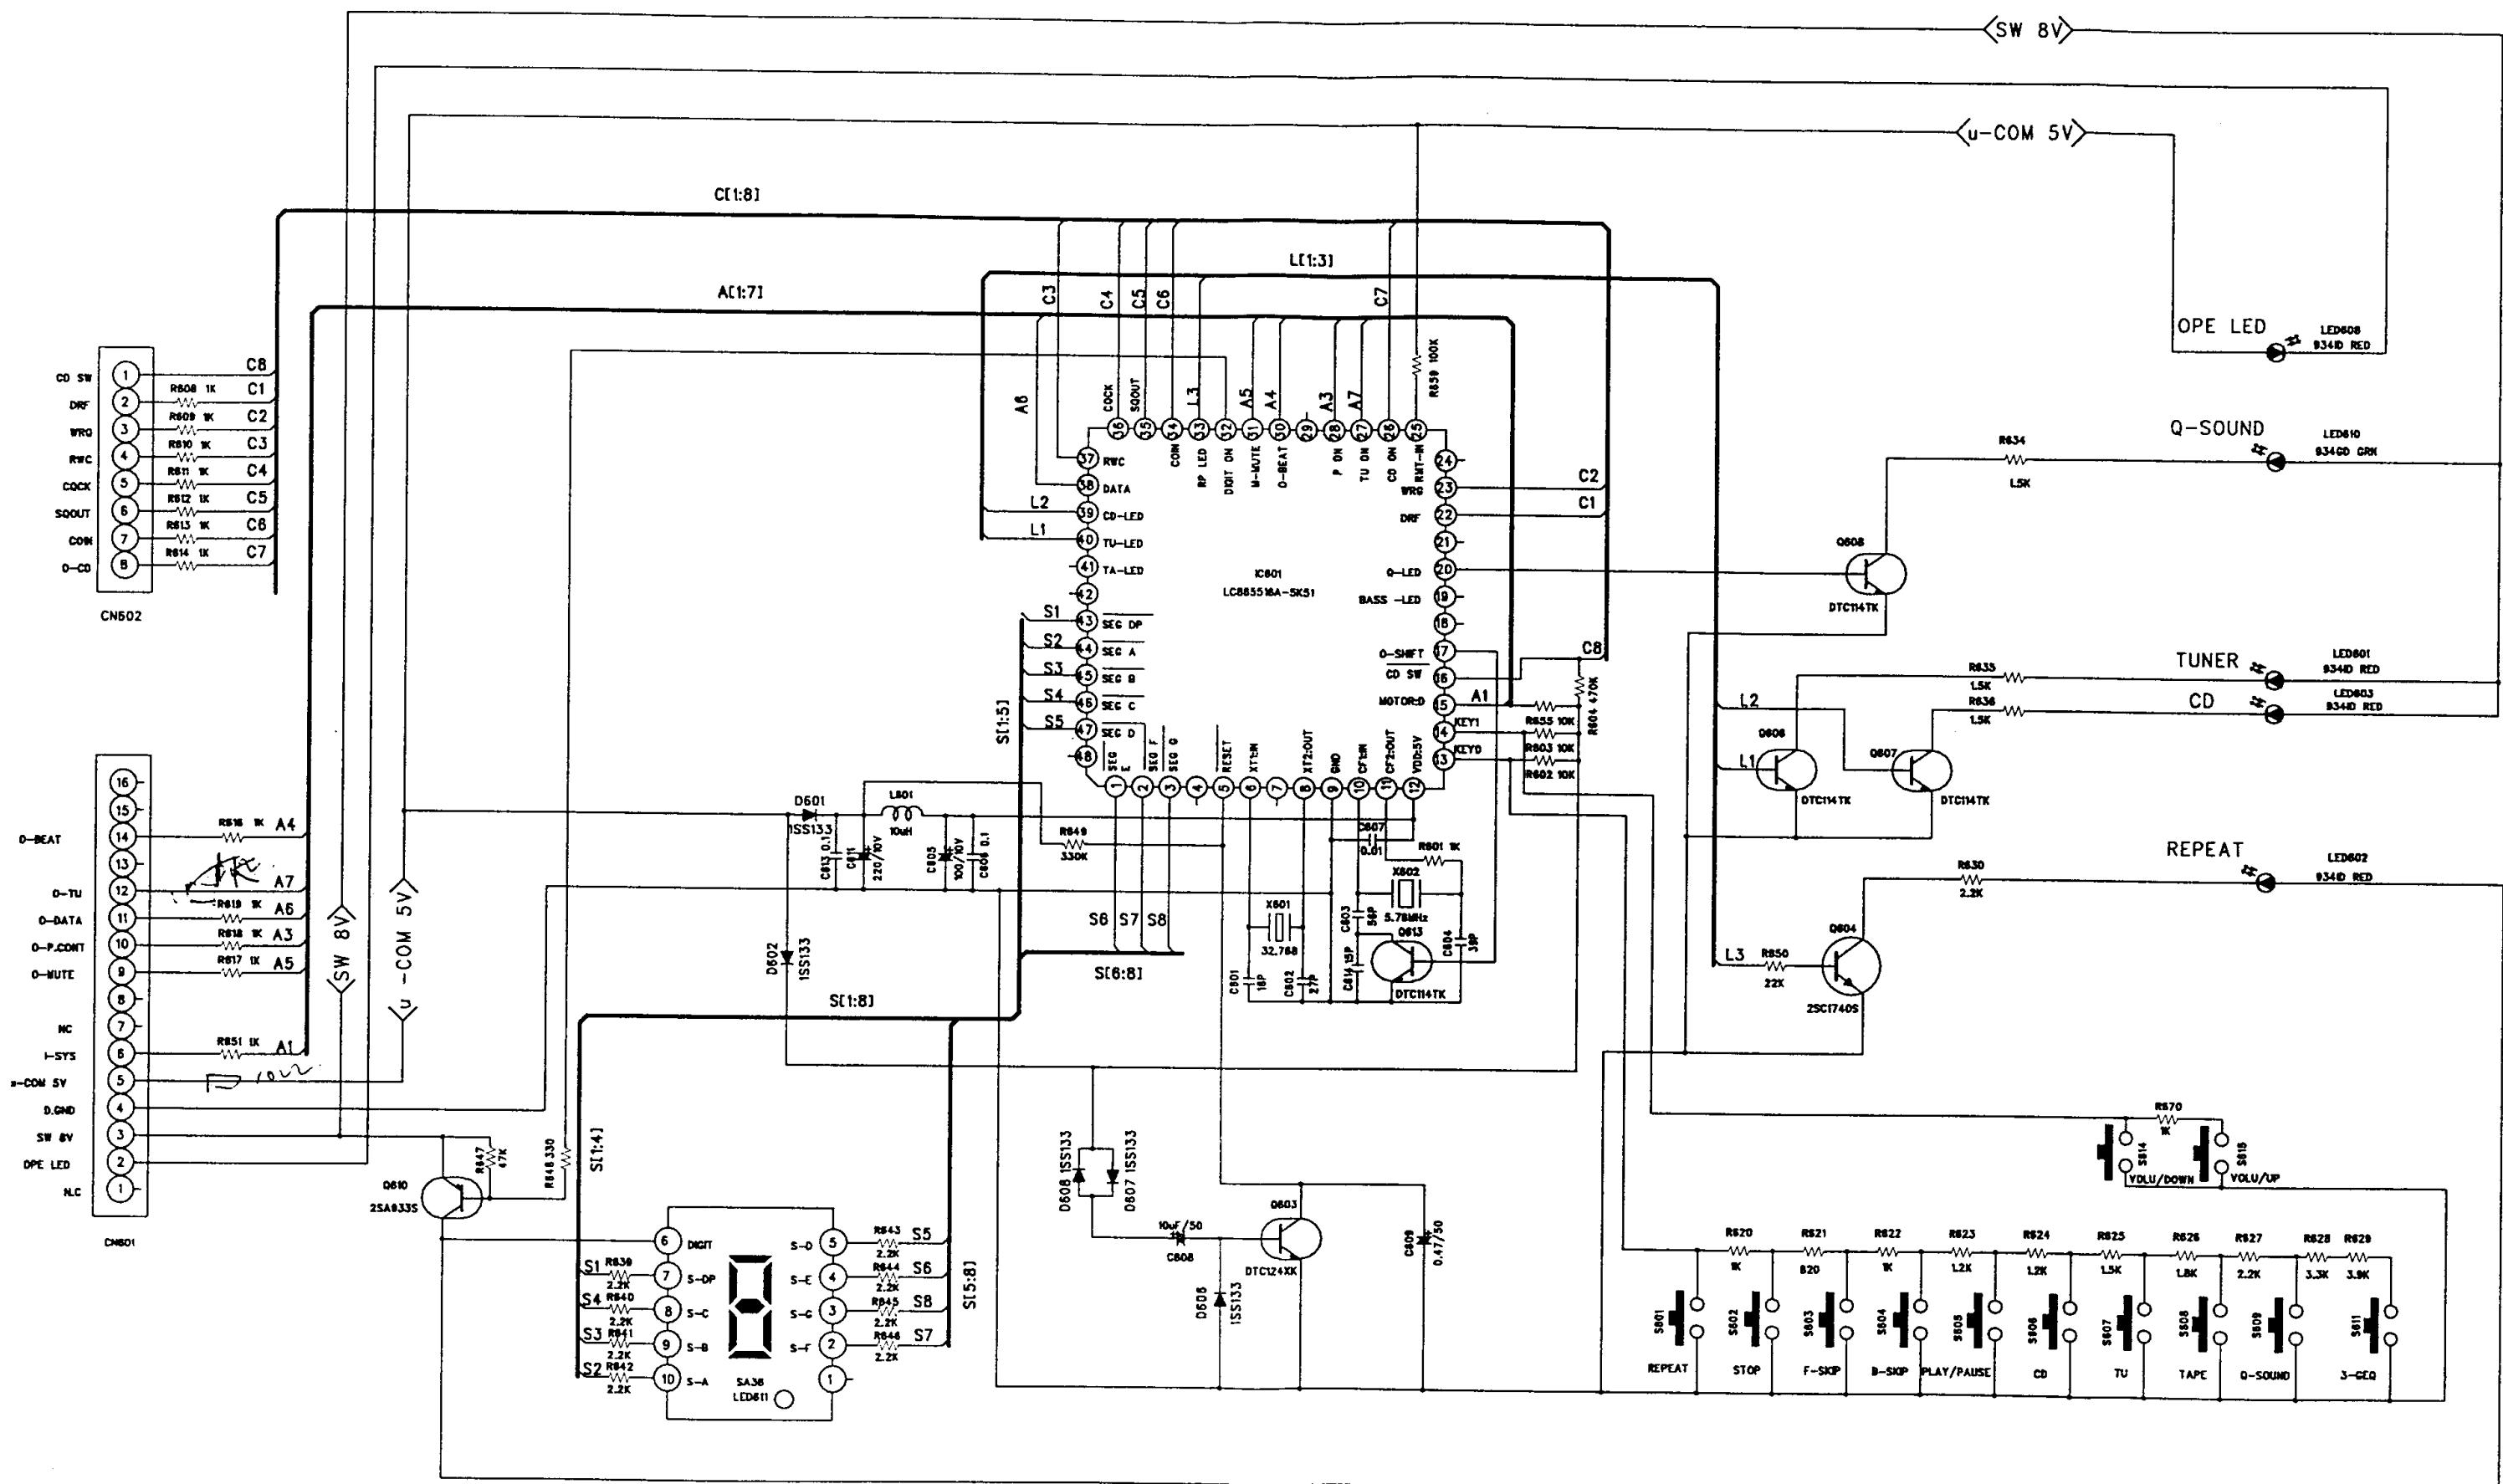

SCHEMATIC DIAGRAM-4

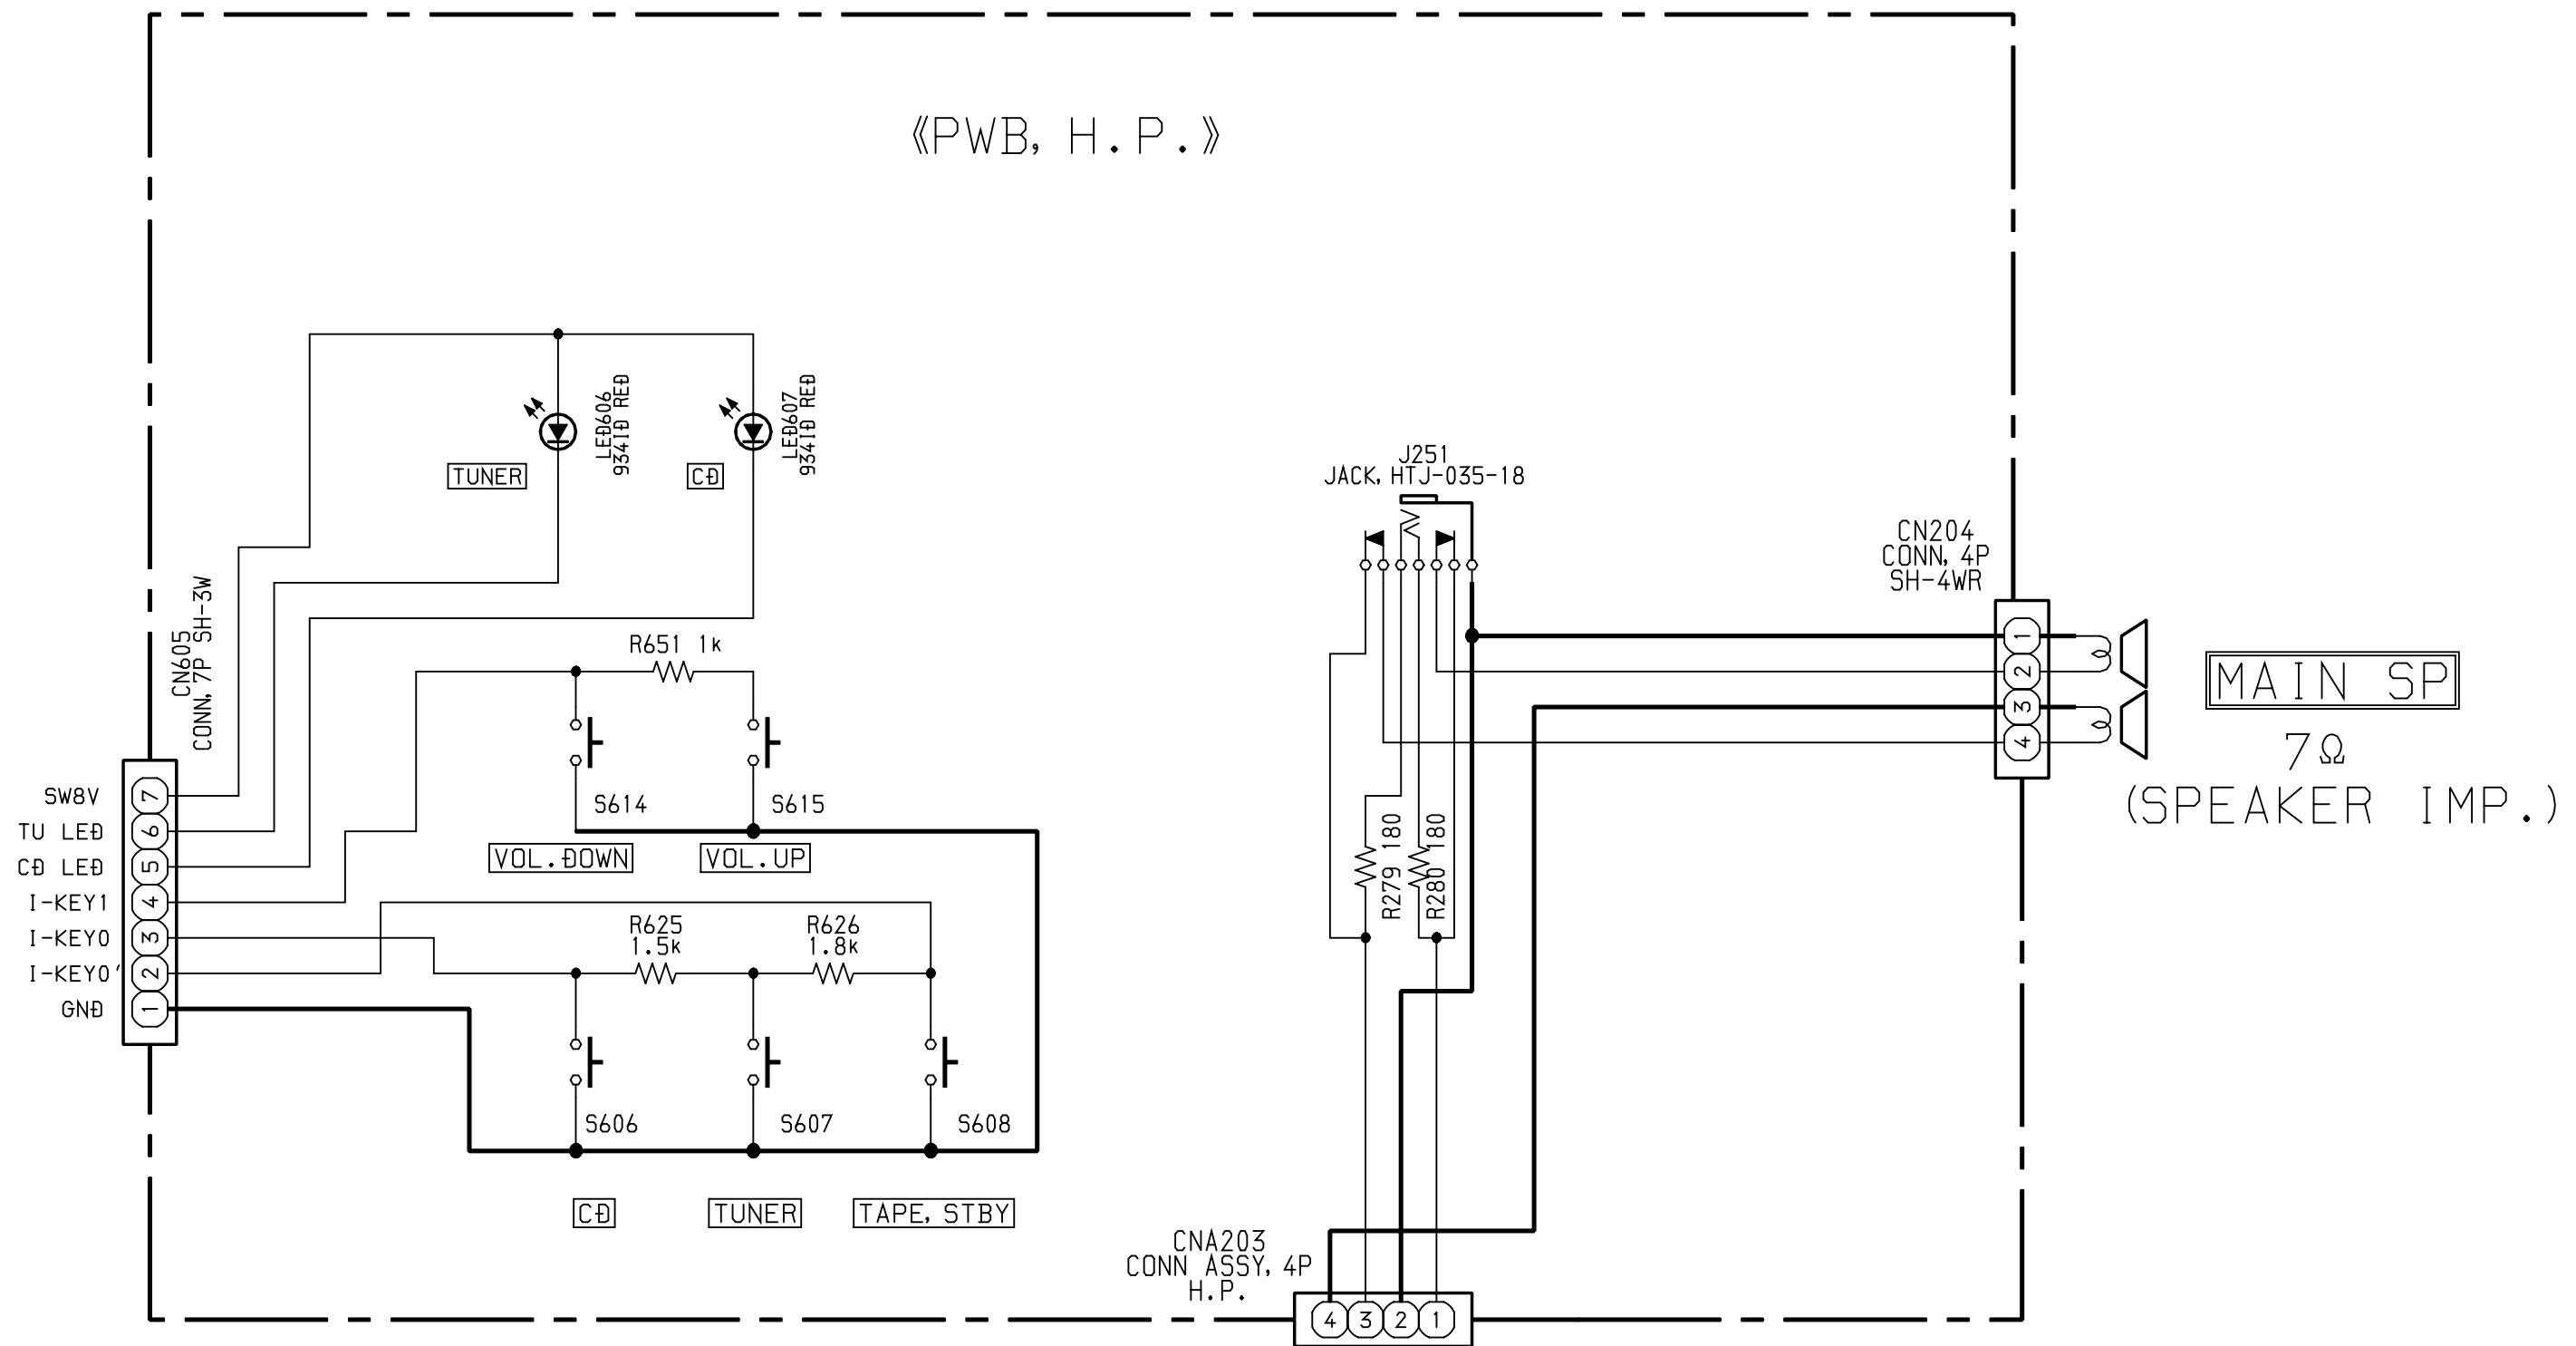

SCHEMATIC DIAGRAM-5

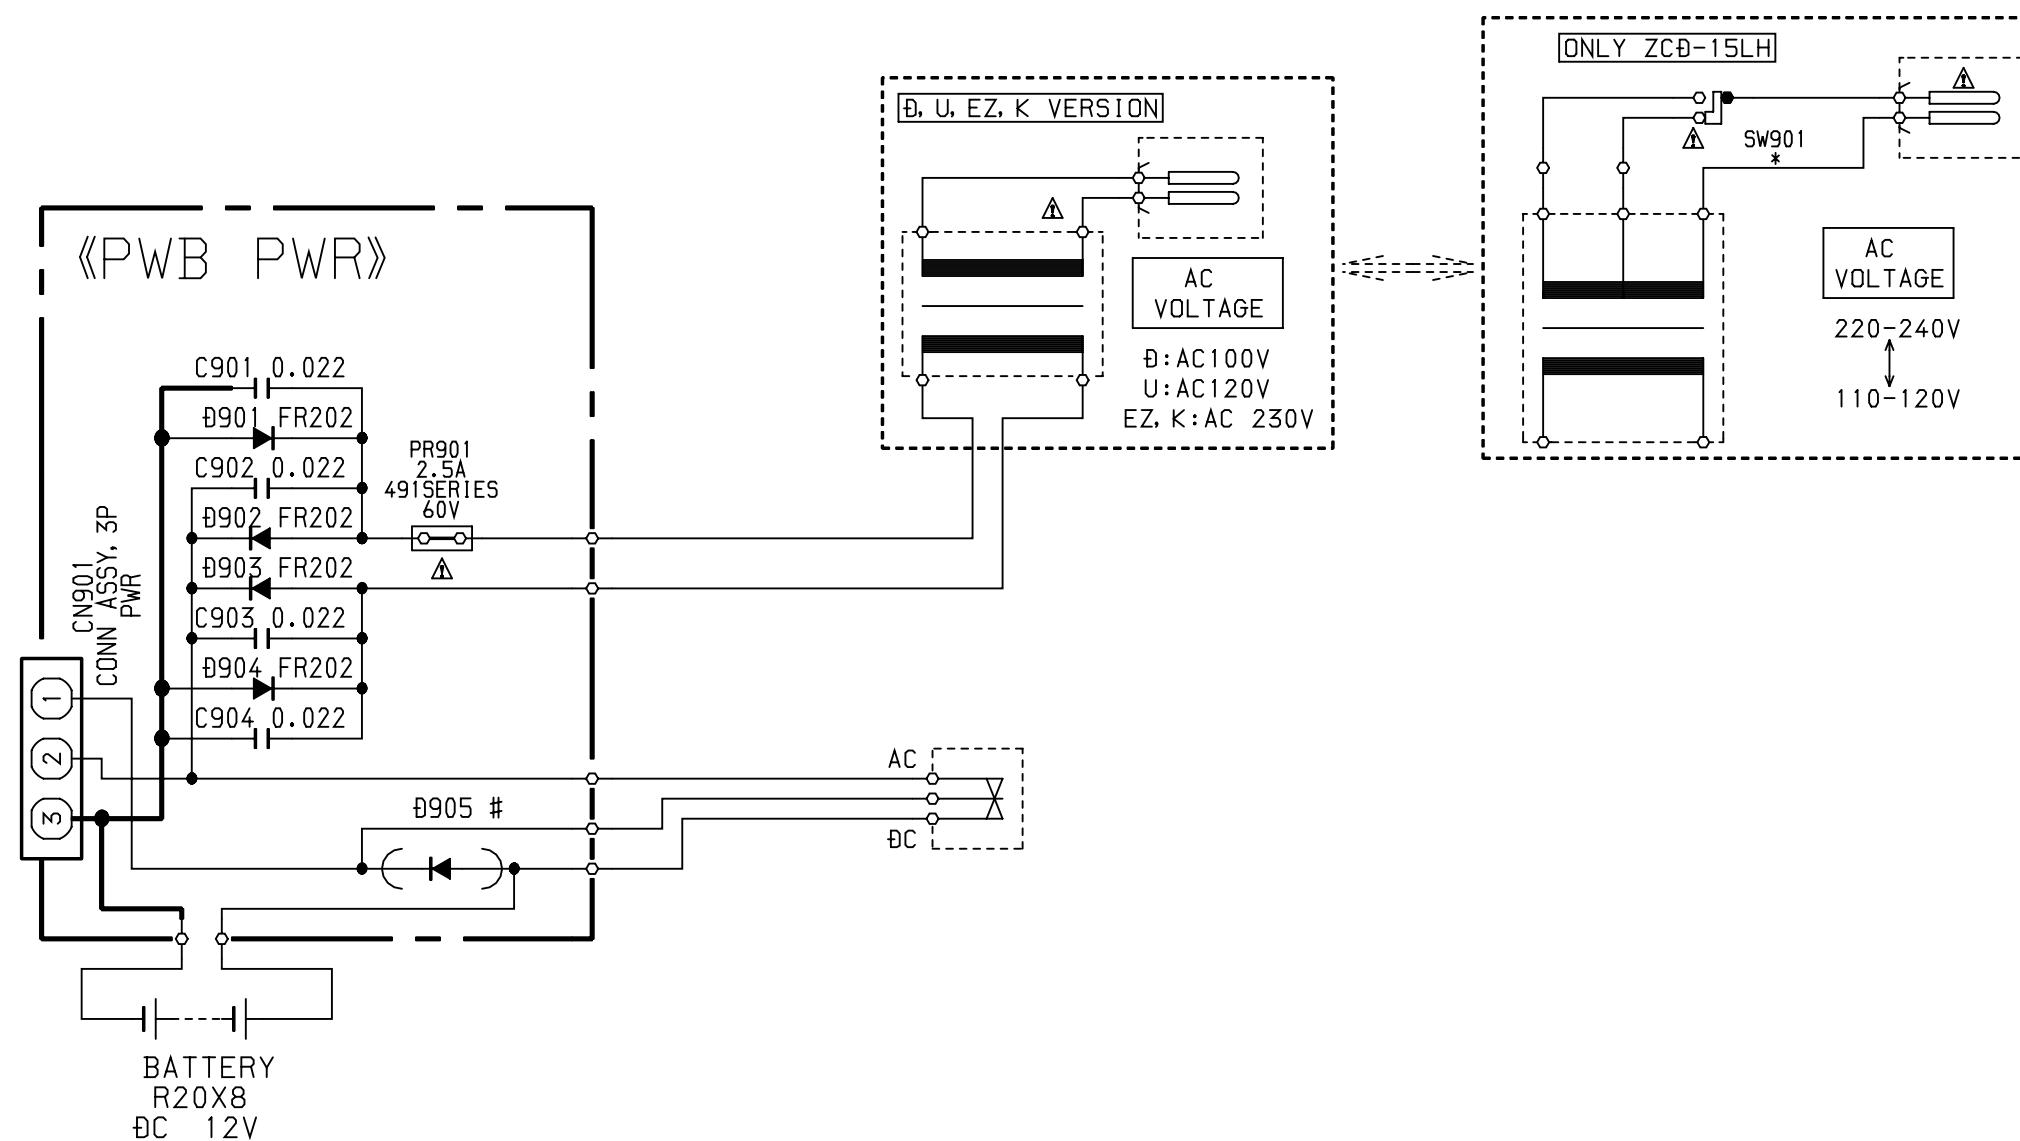

# MECHANICAL PARTS LIST - 1

NOTE: The characters in the suffix column indicate the part usage.

HR(S) . . . . .	XX . . . . .	A . . . . .
HT(W) . . . . .	XX . . . . .	B . . . . .
HT(L) . . . . .	XX . . . . .	C . . . . .
HA(S) . . . . .	XX . . . . .	G . . . . .
HR(L) . . . . .	XX . . . . .	H . . . . .

REF. NO	PARTS NO.	NO.	DESCRIPTION	SUFFIX
*	8A-CD8-002-010		CABI, REAR D	A . . . . .
	8A-CD8-003-010		LID, BATT	A . . . . .
	8A-CD8-004-010		BOX, CD D	A . . . . .
	8A-CD8-005-010		CHAS, CD D	A . . . . .
	8A-CD8-006-010		BOX, CASS	A . . . . .
	8A-CD8-007-010		WINDOW, CASS	A . . . . .
	8A-CD8-008-010		HANDL, FR	A . . . . .
	8A-CD8-009-010		HANDL, REAR	A . . . . .
	8A-CD8-010-010		POINTER, TU	A . . . . .
	8A-CD8-018-010		PANEL, FR L	ABCDEFGH .
	8A-CD8-019-010		WINDOW, DISPLAY D	A . . . . .
	8A-CD8-020-010		WINDOW, DIAL D	A . . . . .
	8A-CD8-021-010		CHAS, CASS	A . . . . .
	8A-CD8-022-010		PANEL, FR R	A . . . . .
	8A-CD8-024-010		CABI, REAR U	A . . . . .
	8A-CD8-026-010		CABI, REAR EZ	A . . . . .
	8A-CD8-027-010		BOX, CD EX	A . . . . .
	8A-CD8-028-010		CHAS, CD EX	A . . . . .
	8A-CD8-029-010		WINDOW, DIAL U	A . . . . .
	8A-CD8-030-010		WINDOW, DIAL EZ	A . . . . .
	8A-CD8-031-010		WINDOW, DIAL HR	A . . . . .
	8A-CD8-043-010		WINDOW, DISPLAY EX	A . C . . . .
	8A-CD8-045-010		CABI, REAR D (W)	A . . . . .
	8A-CD8-050-010		WINDOW, DISPLAY EX (W)	A . . . . .
	8A-CD8-051-010		WINDOW, DIAL HR (W)	A . . . . .
	8A-CD8-053-010		CABI, REAR D (P)	A . . . . .
	8A-CD8-054-010		LID, BATT (P)	A . . . . .
	8A-CD8-055-010		BOX, CD D (P)	A . . . . .
	8A-CD8-056-010		CHAS, CD D (P)	A . . . . .
	8A-CD8-057-010		BOX, CASS (P)	A . . . . .
	8A-CD8-058-010		WINDOW, CASS (P)	A . . . . .
	8A-CD8-059-010		HANDL, FR (P)	A . . . . .
	8A-CD8-060-010		HANDL, REAR (P)	A . . . . .
	8A-CD8-067-010		PANEL, FR L (P)	A . . . . .
	8A-CD8-068-010		WINDOW, DISPLAY D (P)	A . . . . .
	8A-CD8-069-010		WINDOW, DIAL D (P)	A . . . . .
	8A-CD8-070-010		CHAS, CASS (P)	A . . . . .
	8A-CD8-075-010		BOX, CD D (W)	A . . . . .
	8A-CD8-076-010		CHAS, CD D (W)	A . . . . .
	8A-CD8-078-010		CABI, FR ASSY D	A . . . . .
	8A-CD8-079-010		CABI, FR ASSY EX	A . . . . .
	8A-CD8-080-010		CABI, FR ASSY LH1	A . . . . .
	8A-CD8-081-010		CABI, FR ASSY D (W)	A . . . . .
	8A-CD8-082-010		CABI, FR ASSY D (P)	A . . . . .
	8A-CD8-084-010		CABI, REAR U (L)	A . . . . .
	8A-CD8-085-010		CABI, FR ASSY (L)	A . . . . .
	8A-CD8-088-010		WINDOW, DIAL HR (L)	A . . . . .
	8A-CD8-090-010		CABI, FR ASSY (W)	A . . . . .
	8A-CD8-091-010		WINDOW, DISPLAY D (W)	A . . . . .
	8A-CD8-092-010		WINDOW, DIAL D (W)	A . . . . .
	8A-CD8-093-010		CABI, REAR U (W)	A . . . . .
	8A-CD8-096-010		PANEL, FR R (P)	A . . . . .
	8A-CH8-017-010		LID, BATT (W)	A . . . . .
	8A-CH8-018-010		BOX, CD (W)	A . . . . .
	8A-CH8-019-010		CHAS, CD (W)	A . . . . .
	8A-CH8-020-010		BOX, CASS (W)	A . . . . .
	8A-CH8-021-010		WINDOW, CASS (W)	A . . . . .
	8A-CH8-022-010		HANDL, FR (W)	A . . . . .
	8A-CH8-023-010		HANDL, REAR (W)	A . . . . .
	8A-CH8-029-010		PANEL, FR L (W)	A . . . . .
	8A-CH8-030-010		PANEL, FR R (W)	A . . . . .
	8A-CH8-031-010		CHAS, CASS (W)	A . . . . .
	8A-CH8-036-010		LID, BATT (L)	A . . . . .
	8A-CH8-037-010		BOX, CD (L)	A . . . . .
	8A-CH8-038-010		CHAS, CD (L)	A . . . . .
	8A-CH8-039-010		BOX, CASS (L)	A . . . . .
	8A-CH8-040-010		WINDOW, CASS (L)	A . . . . .
	8A-CH8-041-010		HANDL, FR (L)	A . . . . .
	8A-CH8-042-010		HANDL, REAR (L)	A . . . . .
	8A-CH8-047-010		CHAS, CASS (L)	A . . . . .
	8A-CH8-048-010		PANEL, FR L (L)	A . . . . .
	8A-CH8-049-010		PANEL, FR R (L)	A . . . . .
	8Z-CDB-169-010	1D	PANEL, CD SANYO	ABCDEFGH .
	8Z-CL7-107-010	0E	BADGE, AIWA SILVER	ABCDEFGH .
	8A-CD8-011-010		KEY, CASS SET	A . . . . .
	8A-CD8-012-010		KNOB, RTRY TU	A . . . . .
	8A-CD8-013-010		KNOB, SL BAND	A . . . . .
	8A-CD8-014-010		KEY, VOL	A . . . . .
	8A-CD8-015-010		KEY, FUNC	A . . . . .
	8A-CD8-016-010		KEY, CONTROL CD	A . C . E . GH .
	8A-CD8-017-010		KEY, QSOUND	ABCDEFGH .
	8A-CD8-046-010		KNOB, RTRY TU (W)	B . D . . . .
	8A-CD8-047-010		KNOB, SL BAND (W)	B . D . . . .

## MECHANICAL PARTS LIST - 2

8A-CD8-048-010	KEY, FUNC (W)	.B.D.....
8A-CD8-049-010	KEY, CONTROL CD (W)	.B.D.....
8A-CD8-061-010	KEY, CASS (P)	...F.....
8A-CD8-062-010	KNOB, RTRY TU (P)	...F.....
8A-CD8-063-010	KNOB, SL BAND (P)	...F.....
8A-CD8-064-010	KEY, VOL (P)	...F.....
8A-CD8-065-010	KEY, FUNC (P)	...F.....
8A-CD8-066-010	KEY, CONTROL CD (P)	...F.....
8A-CD8-086-010	KNOB, RTRY TU (L)	.C...H.....
8A-CD8-087-010	KNOB, SL BAND (L)	.C...H.....
8A-CD8-095-010	KEY, FUNC (L)	.C...H.....
8A-CH8-024-010	KEY, CASS (W)	.B.D.....
8A-CH8-025-010	KEY, VOL (W)	.B.D.....
8A-CH8-043-010	KEY, CASS (L)	.C...H.....
8A-CH8-044-010	KEY, VOL (L)	.C...H.....
M8-ZZK-E90-070	2B DA11T3C	ABCDEFGH.....
84-CD5-215-010	0E GEAR	ABCDEFGH.....
84-CD5-216-010	0E BRACKET	ABCDEFGH.....
84-CT5-209-010	1D PLATE, MAGNET	ABCDEFGH.....
87-036-368-010	0E MAGNET	ABCDEFGH.....
88-CD8-209-010	SPR-C, BATT	ABCDEFGH.....
88-CD9-211-210	0E RING, CHUCK	ABCDEFGH.....
8A-CD8-201-010	GEAR, IDLER	ABCDEFGH.....
8A-CD8-202-010	LEVER, BAND	ABCDEFGH.....
8A-CD8-203-010	DRUM, DIAL	ABCDEFGH.....
8A-CD8-206-010	HLDR, LED	ABCDEFGH.....
8A-CD8-207-010	SPR-T, CASS	ABCDEFGH.....
8A-CD8-208-010	SPR-T, CD	ABCDEFGH.....
* 8A-CD8-209-010	HLDR, TRANS	ABCDEFGH.....
* 8A-CD8-210-010	HLDR, SPKR A	ABCDEFGH.....
* 8A-CD8-211-010	HLDR, SPKR B	ABCDEFGH.....
* 8A-CD8-212-010	HLDR, ANT	ABCDEFGH.....
8A-CD8-213-010	SPR-P, REC	ABCDEFGH.....
8Z-CDB-170-010	1D BASE, CHUCK	ABCDEFGH.....
87-067-566-010	0E TAPPING SCREW, VFTT+3-6	ABCDEFGH.....
87-254-097-410	0E U+3-12 CR	ABCDEFGH.....
87-342-074-010	0E UT2+2.6-8	ABCDEFGH.....
87-353-076-210	0E VT2+2.6-12	ABCDEFGH.....
87-571-032-410	0E VIT+2-3	ABCDEFGH.....
87-641-096-410	0E UT1+3-10 GLD	ABCDEFGH.....
87-661-097-410	0E TAPPING SCREW, VFT1+3-12	ABCDEFGH.....
87-741-095-410	0E UT2+3-8 GLD	ABCDEFGH.....
87-741-097-410	0E UT2+3-12	ABCDEFGH.....
87-B10-242-010	0E UT2+3-30 W/O CR	ABCDEFGH.....
87-WA5-253-010	W, 3.3-10-0.8	ABCDEFGH.....
* 87-036-389-010	1B SW, PUSH LOCK	ABCDEFGH.....
87-751-094-410	0E VT2+3-6 W10SL0T	ABCDEFGH.....
* 87-A60-178-010	JACK, AC E W/SW	ABC...GH.....
* 87-A60-179-010	1A JACK, AC D W/SW	...DEF.....
* 87-A90-086-010	0E COVER, AC-SOCKET	ABCDEFGH.....
* 87-A91-369-010	1C SW, AC SL 2 2 2 SDKGA41700	ABC...GH.....
SP 0 88-CD8-622-010	1F SPKR, F 77 70HM 3W	ABCDEFGH.....
PT 901 8A-CD8-601-010	PT, D 2.5W	...DEF.....
PT 901 8A-CD8-603-010	PT, E 2.5W	ABC...GH.....
PT 901 8A-CD8-604-010	PT, H 2.5W	ABC...GH.....
W 0 8A-CD9-620-010	FF-CABLE, 16P FR-MAIN	ABCDEF.....
W 0 8A-CD9-621-010	FF-CABLE, 16P CD-RF	ABCDEF.....
W 0 8A-CD9-622-010	FF-CABLE, 8P CD-FR	ABCDEF.....
CNA 0 8A-CD9-626-010	CONN ASSY, 2P DOOR	ABCDEF.....
CNA 0 8A-CD9-630-010	CONN ASSY, 4P RPH	ABCDEF.....
CNA 0 8A-CD9-631-010	CONN ASSY, 4P TP-ME	ABCDEF.....
CNA 0 8A-CD9-633-010	CONN ASSY, 4P SP	ABCDEF.....
* 8Z-CH4-640-010	ANT, ROD	ABCDEF.....

## ACCESSORIES LIST

NOTE: The characters in the suffix column indicate the part usage.

HR(S) .....	XX.....	A.....
HT(W) .....	XX.....	B.....
HT(L) .....	XX.....	C.....

HA(S) .....	XX.....	G.....
HR(L) .....	XX.....	H.....

REF.NO	PARTS NO.	NO.	DESCRIPTION	SUFFIX
8A-CD8-901-010		IB	H(ECA)B	ABC.....H.....
8A-CD8-902-010		IB	LH(ESP)B	.....G.....
8A-CD8-905-010		IB	K(E)B	PDF.....
8A-CD8-906-010		IB	EZ(9L)B	PDF.....
8A-CD8-908-010		IB	D(J)B	.....DEF.....
8A-CD8-911-010		IB	H(EC-K)B	.....
8A-CD8-940-010		IB	LH1(P)KIT	.....
87-A80-033-010	1C	AC	CORD SET,D BLK	.....DEF.....
87-A80-034-010	2M	AC	CORD SET ASSY,K W/F MAY-BG	ABC.....H.....
87-A80-036-010		AC	CORD SET ASSY,E W/FLTR VOL	.....
87-A80-089-010	1C	AC	CORD SET,HC	.....
87-A80-119-010	1C	AC	CORD SET ASSY,AZ	.....G.....
87-A91-017-010	1A	PLUG,CONVERSION	JT-0476	ABC.....H.....



**アイワ株式会社** 〒110-8710 東京都台東区池之端1-2-11 ☎ 03(3827) 3111 (代表)  
**AIWA CO., LTD.** 2-11, IKENOHATA 1-CHOME, TAITO-KU, TOKYO 110-8710, JAPAN TEL:03 (3827) 3111  
931196 Printed in Singapore